

2D Barcode Scanner

User's Manual

Introduction

This user's manual is designed for 2D barcode scanner. For detailed usage manual information, please download the complete user manual from our website or obtain from our distributor.

Programming the Scanner

Restore Factory Setting



Restore Factory Settings

Scanning the following barcode can restore the scanner to the factory defaults.

"*"denotes default setting

Data interface



*USB-KBW



RS232



USB Virtual Com

Illumination



V6.2



OFF



Flashing Mode

Good Read Beep



*ON



OFF



High



Middle



Low

Scan Mode



*Manual Mode



Induction Mode



*Ordinary sensitivity



Low sensitivity



High sensitivity



Higher sensitivity

Caps Lock



*Original Data



Lower case compulsive



Upper case compulsive

Terminal



Disable



*Enable



*Enter(0x0D)



TAB



0x0D+0x0A



F1



F10



F12

Anti-color code read



Only Read Black Code



Read Black And Anti-color Code Both

RS-232 Interface

Data Bits



7Bits



*8Bits

Parity Check



*None



Even parity



Odd parity

Stop Bits



*1Bits



2Bits

Baud Rate



*9600



1200



4800



19200



38400



57600



115200

Language



*USA



French



Italy



Germany



Czechoslovakia



Japan



Spain



Russia

ALT

Checking digit



Not transmit EAN13



*Transmit EAN13



Not transmit UPC A



*Transmit UPC A



Full ASCII 39



*Standard 39

Global Settings



Enable all codes



Disable all codes



Enable 1D codes



Disable 1D codes



Enable 2D codes



Disable 2D codes



*Allow to read code 39



Not allow to read code 39



*Allow to read code 128



Not allow to read code 128